

REPLAY MIC

1 Setting the Camera Up

ENABLE

Prime-X

To enable external audio on your Prime X, hold the FOV button for 3 seconds until you feel vibration feedback. The back LEDS should begin to flash once ext audio is on.

Mini

To enable external audio on your Mini, flip the small switch on the rear of the camera.



The Replay Mic is battery operated and must be turned on and off when you aren't using it. Use the switch on the Mic wire to turn it on/off as needed.

Note* - The mic is fairly quiet and should work well in a loud racecar.

REPLAY MIC

1 Setting the Camera Up

ENABLE

Prime-X

To enable external audio on your Prime X, hold the FOV button for 3 seconds until you feel vibration feedback. The back LEDS should begin to flash once ext audio is on.

Mini

To enable external audio on your Mini, flip the small switch on the rear of the camera.



The Replay Mic is battery operated and must be turned on and off when you aren't using it. Use the switch on the Mic wire to turn it on/off as needed.

Note* - The mic is fairly quiet and should work well in a loud racecar.